



AS1428
Compliant

BTX-06-025

Introducing the Britex Surface Mount Toilet Tissue Hooded Dispenser, the perfect blend of durability, design, and functionality. Crafted from 304 Stainless Steel, this dispenser offers superior corrosion resistance, ensuring long-lasting performance. The surface mount design allows for easy installation and visible fixings, ensuring stability and security.

It's the ideal choice for businesses and facilities that prioritise both aesthetics and functionality.


Features and Benefits

- **High-quality 304 stainless steel** known for its excellent corrosion resistance and durability, ensuring a long-lasting and robust construction.
- **Adheres to the AS1428 standards** which are Australian guidelines for accessibility, ensuring it is suitable for use by individuals with disabilities and meets all necessary compliance requirements.
- **Versatile installation design** allowing it to be securely wall-mounted or recessed into the wall.
- **Stainless steel finish** which not only enhances its aesthetic appeal but also provides additional protection against wear and tear.
- **High durability product** built to withstand heavy use and harsh conditions, making it an ideal choice for both commercial and residential applications.
- **Removable hood** allowing for easy access and maintenance.

Sample Spec

Britex S.S. Surface Mount Toilet Tissue Hooded Dispenser - 161mmW x 161mmH x 88mmD O/A - Product Code BTX-06-025

*RED TEXT may denote a **variable** where one option only is to be selected, a **nominal dimension** that needs to be specified, or an **optional feature** that can be removed if not required. Please refer to the back of this page for additional specification details and options.

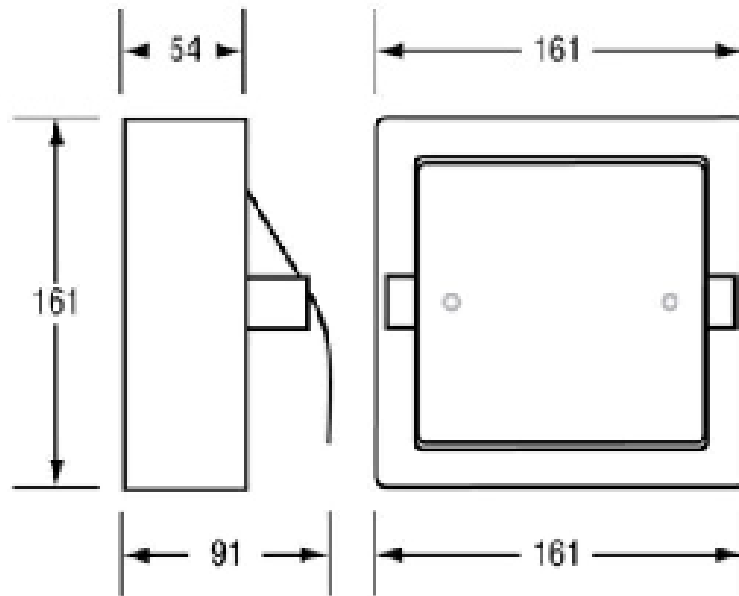

Installation Guidelines

May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.

1. Locate fixing position in the wall and mark using the fixing holes on the rear of the toilet roll holder.
2. Using screws and wall plugs provided, pre-screw the holes.
3. On the perimeter of the toilet roll holder, place a suitable amount of an adhesive or high strength bonding agent.
4. Loosely secure unit to wall surface using fixings.
5. Level the unit, then push firmly so that it sits flush with the wall.
6. Firmly screw the toilet roll holder into place and leave the adhesive to set for 24 hours before using.

VISIT [BRITEX.COM.AU](https://www.britex.com.au) TO DOWNLOAD BIM FILES, CAD DRAWINGS AND THE MOST CURRENT PRODUCT LITERATURE.

Last Revised 02 May 2025 | A